# Console Lithium Battery Series User Manual



## Content

1	Safety Inf	ormation	1
	1.1 1.2 1.3 1.4 1.5	General Safety	2 2 4
2	Product	nformation	5
3	2.1 2.2 2.3 2.4 2.5 2.6 <b>Specifica</b>	Battery Overview Appearance Dimensions Capacity Options Operation Communication Port	5 . 7 . 8 . 9
	3.1	3- Series Battery Specifications	
	3.2 3.3 3.4 3.5 3.6	4- Series Battery Specifications  5- Series Battery Specifications  6- Series Battery Specifications  7- Series Battery Specifications  8- Series Battery Specifications	12 13 14
	3.0	0- 351153 Dallety 30601110ations	10


## **1 Safety Information**

#### 1.1 General Safety

Please carefully read the manual safety precautions, and observe all the safety instructions on the equipment and in this document.

The "DANGER", "WARNING", and "NOTICE" statements in this document do not cover all the safety instructions. They are only supplements to the safety instructions.

For user safety and utilization efficiency of this manual, a list of symbols are designed to alert people from danger. You must understand and comply with the emphasized information to avoid personal injury and property damage. Relative safety symbols have been listed below.

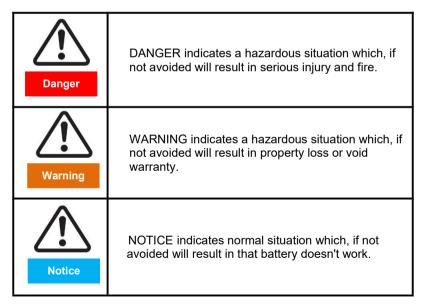

Follow local laws and regulations when installing, operating, or maintaining the equipment. The safety instructions in this document are only supplements to local laws and regulations.

#### 1.2 Personal Safety Personal Requirements

People who plan to install or maintain battery equipment must be trained, understood all necessary safety precautions, and are able to perform all operations correctly.

Only qualified professionals or trained people are allowed to install, operate, and maintain the equipment.

#### **Personal Safety**

#### **⚠** Danger

- Do not place battery at a children or pet touchable area.
- Do not touch the energized battery, as the enclosure is hot.
- Do not touch the energized battery terminals.
- > Do not stand on, lean on, or sit on the battery.

#### 1.3 Electrical Safety

#### Symbols on battery

There are some electrical symbols on battery relate to electrical safety. Please make sure you have fully understand them before installation.

4	Electrical danger	Voltage exits when the battery is powered on. Only qualified engineers are allowed to operate.
•	Earth connector	Earth connection.
+-	DC positive and negative connectors	Identify positive and negative connectors of DC power source.
( €	CE mark	The product meets CE certification.
<b>2</b>	WEEEtag	Can't leave battery as garbage disposal.
	Recycle	Battery can be recycled.

#### **Electrical Safety**

#### ▲ Danger

- Before installation, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.
- ➤ Do not connect or disconnect power cables when battery is power-on. Which may cause electric arcs and sparks more overfire or personal injury.Before connecting a power cable, check the positive or negative connectors are correct.
- Do not connect in series with different batteries.
- Do not connect battery with AC directly.
- Do not connect battery with PV wiring directly.
- > Batteries are not allowed to be used in parallel.
- > Do not connect battery to faulty or unqualified inverter or charger.
- Do not create short circuits with the external connection.
- Make sure the grid is cut off and the battery is powered off before maintenance.
- Make sure the earth cable is connected correctly before operation.

#### **⚠** Warning

- Recharge battery in every six months.
- Recharge battery within 10 days after battery is fully discharged.
- > Make sure battery cable placement is installed correctly.
- > When the battery is being installed or repaired, make sure the battery is powered off and using a multimeter to make sure there is no voltage in the positive and negative terminals.

## **⚠** Notice

- > Please use dedicated insulated tools for install and maintenance.
- Please make sure all batteries are power-off when multiple connection in series.
- > Please check lights on sequence when battery power-on.
- Please make sure communication connection connect correctly with battery and inverter.
- Please check inverter alarm or SOC reading when there is BMS communicated with inverter.

#### 1.4 Environment Safety

## **Marning**

- Ensure that the equipment is installed in a dry and well-ventilated environment.
- ➤ The installation position must be away from direct sunlight and rain.
- The installation position must be far away from fire sources.
- ➤ The installation position must be far away from water sources such as taps, sewer pipes, and sprinklers to prevent water seepage.
- > The bracket must be installed solidly and horizontally.
- > Do not expose the equipment to flammable or explosive gas or smoke.
- > Do not perform any operation on the equipment in such environments.
- ➤ The operation and service life of the battery depends on the operating temperature. Operate the battery at a temperature equal to or better than the ambient temperature. The recommended operating temperature range is from 0°C to 30°C.

#### 1.5 Transportation Safety

## **▲** Warning

- The products belong to class 9 dangerous goods.
- Please protect the packing case from the below situations. Being dampened by rains, snows, or falling into water.
- > Falling or mechanical impact.
- Being upside-down or tilted.

## **2 Product Information**

#### 2.1 Battery Overview


The battery is a high voltage smart series lithium battery pack which consists of long span LiFePO4 battery cells and functional BMS. It can store and release electric energy based on the requirements of the inverter controller. It is mainly for home energy storage system.

#### **Features**

- ➤ LiFePO4 prismatic cell
- > 6000 cycles @0.5C & 25℃ conditions
- Maximum 0.7C charge and discharge capability
- High voltage smart series
- Be extended to 8 packs maximum
- Protective and active BMS allows greater reliability and control
- > IP 65 grade
- > Fully recyclable at the end of life
- Compact

#### 2.2 Appearance

#### 2.2.1 High Voltage Box Appearance

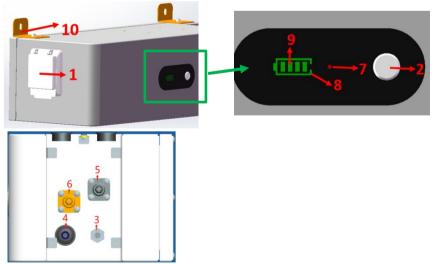


- 1) The DC power switch
- 2) The start-up switch
- 3) WiFi
- 4) Inverter communication port
- 5) Inverter Negative terminal
- 6) Inverter Positive terminal
- 7) ALM
- 8) RUN
- 9) SOC

#### 2.3 Dimensions


#### 2.3.1 PDU Dimensions






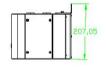

#### 2.3.2 Battery Pack Dimensions

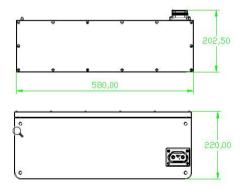

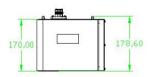

#### 2.4 Capacity Options


The battery can be series connected for extending energy(kWh).



- > The maximum power(kW) is limited by main cables from PDU to inverter.
- > The minimum 3 battery packs can be series communicated.



> The maximum 8 battery packs can be series communicated.

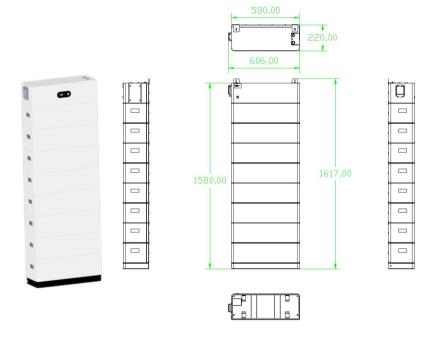

#### Alarm

When the red light is on, some parameters of the battery have reached the warning value, or the battery has begun to be protected, BMS will send a warning when the battery is being charged or discharged. But after the battery protection, some functions of the battery can not be used.

For the alarm item, charging and discharging of the battery is prohibited. After the alarm is cleared, the system will automatically resume work:

- 1 Low temperature warning (forbid charging)
- 2 High temperature alarm (prohibit charging and discharging)
- 3 Communication is abnormal (charging and discharging prohibited)
- 4 Low battery voltage warning (discharge prohibited)
- 5 High battery voltage warning (prohibit charging)
- 6 SOC low alarm (discharge prohibited)

Protection item, battery high voltage protection, the system cannot be restored, and manual intervention is required. After checking that the state of the battery system complies with the battery system manufacturer's manual, it can be powered on again:

- 1 Charging overcurrent protection
- 2 discharge overcurrent protection
- 3 Thermal runaway protection
- 4 The battery is seriously overvoltage
- 5 The battery is seriously undervoltage
- 6 System hardware failure

For other general alarms, it is only an alarm prompt and does not affect the system work

#### 2.5 Operation

#### Power ON

STEP1 → Turn on DC switch.

STEP2 → Press the start button 3s, BMS power supply.

#### Power OFF

Turn off the power switch, the system power is shut down.

#### 2.6 Communication Port


A PDU has one RJ45 ports for communicating with PCS;



## PCS COM

#### PCS COM pin interface definition

Pins	Definitions
1	NC
2	NC
3	NC
4	CAN2H
5	CAN2L
6	NC
7	485A
8	485B

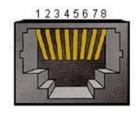

# 3 Specifications

## 3.1 3- Series Battery Specifications

M	Specifications 7.5kWh	remark
Item		
Battery Type	LiFePO4	
Typical Capacity (Ah)	52Ah	
Typical Voltage (V)	144V	
Connection	1P45S	
Voltage Working Range (V)	114.7V-159.7V	Single cell: 2.55V-3.55V
Working Temperature(°C)	Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
Storage Temperature(°C)	-20°C~+35°C	
Nominal Capacity (kWh)	7.488kWh	
Max. Charge Current(A)	35A	
Max. Discharge Current(A)	35A	
Cycle Life	>6000	25°C ,0.5C , 90%DOD
Capacity retention	≥95%	25°C ,0.5C, 500 cycle
SOC Accuracy	<8%	
Weight(kg)	~80kg	
Dimensions(mm)	606x220x730mm	LxWxH
IP Grade	IP65	
Transportation SOC	30%	
Cooling	Nature	

#### 3.2 4- Series Battery Specifications

5.2 4 Genes Battery Opecinic	Specifications 10kWh	
Item		remark
Battery Type	LiFePO4	
Typical Capacity (Ah)	52Ah	
Typical Voltage (V)	192V	
Connection	1P60S	
Voltage Working Range (V)	153V-213V	Single cell: 2.55V-3.55V
Working Temperature(°C)	Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
Storage Temperature(°C)	-20°C~+35°C	
Nominal Capacity (kWh)	9.984kWh	
Max. Charge Current(A)	35A	
Max. Discharge Current(A)	35A	
Cycle Life	>6000	25°C ,0.5C , 90%DOD
Capacity retention	≥95%	25°C ,0.5C, 500 cycle
SOC Accuracy	<8%	
Weight(kg)	~105kg	
Dimensions(mm)	606x220x900mm	LxWxH
IP Grade	IP65	
Transportation SOC	30%	
Cooling	Nature	

#### 3.3 5- Series Battery Specifications

0.0 0 Genes Battery Opecing	Specifications 12.5kWh	
Item		remark
Battery Type	LiFePO4	
Typical Capacity (Ah)	52Ah	
Typical Voltage (V)	240V	
Connection	1P75S	
Voltage Working Range (V)	191.2V-266.2V	Single cell: 2.55V-3.55V
Working Temperature(°C)	Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
Storage Temperature(°C)	-20°C~+35°C	
Nominal Capacity (kWh)	12.48kWh	
Max. Charge Current(A)	35A	
Max. Discharge Current(A)	35A	
Cycle Life	>6000	25°C ,0.5C , 90%DOD
Capacity retention	≥95%	25°C ,0.5C, 500 cycle
SOC Accuracy	<8%	
Weight(kg)	~129kg	
Dimensions(mm)	606x220x1070mm	LxWxH
IP Grade	IP65	
Transportation SOC	30%	
Cooling	Nature	

## 3.4 6- Series Battery Specifications

Specifications 15kWh	remark
52Ah	
288V	
1P90S	
230V-319V	Single cell: 2.55V-3.55V
Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
-20°C~+35°C	
14.976kWh	
35A	
35A	
>6000	25°C ,0.5C , 90%DOD
≥95%	25°C ,0.5C, 500 cycle
<8%	
~152.3kg	
606x220x1240mm	LxWxH
IP65	
30%	
Nature	
	15kWh LiFePO4 52Ah 288V 1P90S 230V-319V Charge: 0°C~+55°C, Discharge: -20°C~+55°C -20°C~+35°C 14.976kWh 35A 35A >6000 ≥95% <8% ~152.3kg 606x220x1240mm IP65 30%

## 3.5 7- Series Battery Specifications

	Specifications 17.5kWh	remark
Item		
Battery Type	LiFePO4	
Typical Capacity (Ah)	52Ah	
Typical Voltage (V)	336V	
Connection	1P105S	
Voltage Working Range (V)	267.7V-372.7V	Single cell: 2.55V-3.55V
Working Temperature(°C)	Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
Storage Temperature(°C)	-20°C~+35°C	
Nominal Capacity (kWh)	17.472kWh	
Max. Charge Current(A)	35A	
Max. Discharge Current(A)	35A	
Cycle Life	>6000	25°C ,0.5C , 90%DOD
Capacity retention	≥95%	25°C ,0.5C, 500 cycle
SOC Accuracy	<8%	
Weight(kg)	~176.2kg	
Dimensions(mm)	606x220x1410mm	LxWxH
IP Grade	IP65	
Transportation SOC	30%	
Cooling	Nature	

## 3.6 8- Series Battery Specifications

	Specifications 20kWh	remark
Item		
Battery Type	LiFePO4	
Typical Capacity (Ah)	52Ah	
Typical Voltage (V)	384V	
Connection	1P120S	
Voltage Working Range (V)	306V-426V	Single cell: 2.55V-3.55V
Working Temperature(°C)	Charge: 0°C~+55°C, Discharge: -20°C~+55°C	
Storage Temperature(°C)	-20°C~+35°C	
Nominal Capacity (kWh)	19.968kWh	
Max. Charge Current(A)	35A	
Max. Discharge Current(A)	35A	
Cycle Life	>6000	25°C ,0.5C , 90%DOD
Capacity retention	≥95%	25°C ,0.5C, 500 cycle
SOC Accuracy	<8%	
Weight(kg)	~199.5kg	
Dimensions(mm)	606x220x1580mm	LxWxH
IP Grade	IP65	
Transportation SOC	30%	
Cooling	Nature	