

# On-Grid PV Inverter

Installation and Operation Manual

[www.aforeenergy.com](http://www.aforeenergy.com)



Version: T06020-03

**Afore**

Afore New Energy Technology (Shanghai) Co., Ltd.

T 86-21-54326236 F +86-21-54326136 E [info@aforeenergy.com](mailto:info@aforeenergy.com)

Ad Building 7, No.333 Wanfang Rd, Minhang District, Shanghai, China. 201112

**Afore**

Afore New Energy Technology (Shanghai) Co., Ltd.

# Contents

1. About This Manual . . . . .	1
1.1 Scope of Validity . . . . .	1
1.2 Target Group . . . . .	1
1.3 System Diagram . . . . .	1
2. Safety & Symbols . . . . .	3
2.1 Safety Precautions . . . . .	3
2.2 Explanations of Symbols . . . . .	4
3. Installation . . . . .	5
3.1 Pre-installation . . . . .	5
3.1.1 Unpacking & Package List . . . . .	5
3.1.2 Product Overview . . . . .	6
3.1.3 Mounting Location . . . . .	9
3.2 Mounting . . . . .	10
4. Electrical Connection. . . . .	12
4.1 PV Connection . . . . .	12
4.2 Grid Connection . . . . .	15
4.3 Earth Connection . . . . .	17
4.4 Communication Connection . . . . .	18
4.5 Zero-injection Smart Meter (Optional) . . . . .	19
5. Operation . . . . .	21
5.1 Control Panel . . . . .	21
5.2 Menu Structure . . . . .	22
5.3 Setting . . . . .	24
5.3.1 Startup . . . . .	24
5.3.2 Voltage Range . . . . .	24
5.3.3 Frequency Range . . . . .	25
6. Commissioning . . . . .	26
7. Start-up & Shut Down . . . . .	26
7.2 Shut down . . . . .	26
7.3 Restart . . . . .	26
8. Maintenance&Trouble Shooting . . . . .	27
8.1 Maintenance . . . . .	27
8.2 Trouble Shooting . . . . .	27
9. Specifications . . . . .	33

# 1. About This Manual

## 1.1 Scope of Validity

This manual describes the installation, commissioning, operation and maintenance of the following on-grid PV inverters produced by Afore New Energy:

### Three-Phase

BNT003KTL BNT004KTL BNT005KTL BNT006KTL BNT008KTL  
 BNT010KTL BNT012KTL BNT013KTL BNT015KTL BNT017KTL  
 BNT020KTL BNT025KTL

Please keep this manual available all the time in case of any emergency.


## 1.2 Target Group

This manual is for qualified personnel. The tasks described in this manual must only be performed by qualified personnel.


## 1.3 System Diagram

The typical on-grid PV system connection diagram.


BNT003KTL BNT004KTL BNT005KTL BNT006KTL BNT008KTL  
 BNT010KTL BNT012KTL BNT013KTL

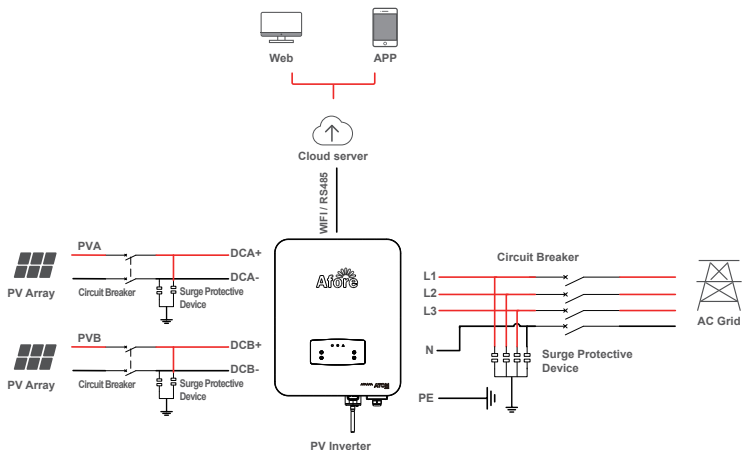

BNT015KTL

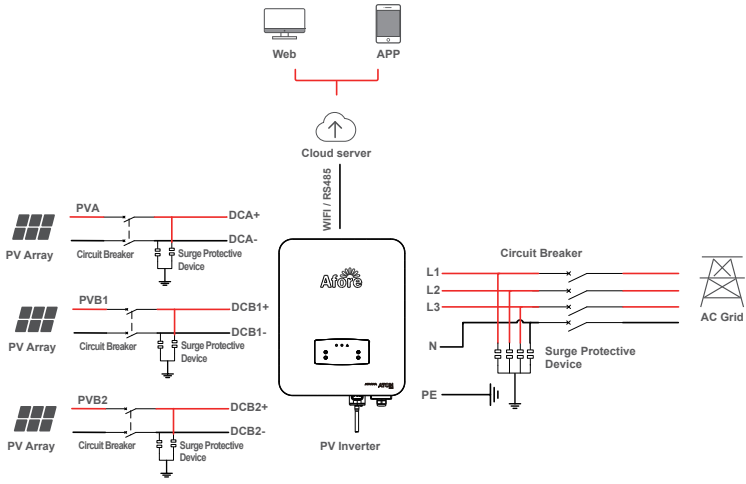

BNT017KTL BNT020KTL BNT025KTL

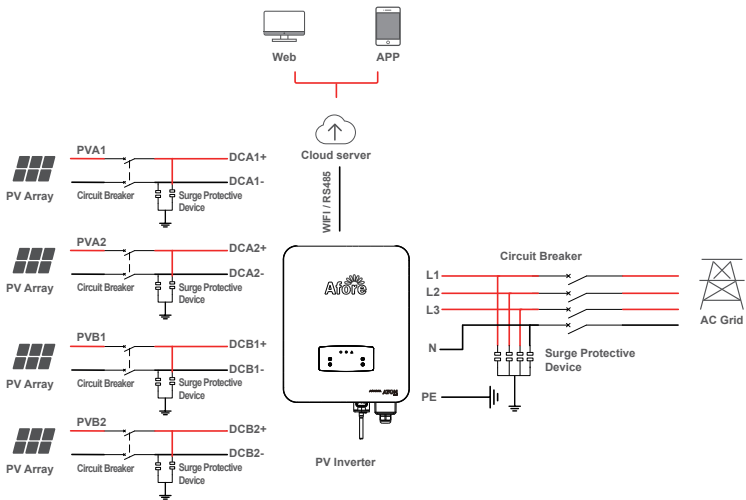

### Circuit Breaker Recommendation

Type	Max AC Current (A)	Rated current of AC breaker (A)
BNT003KTL	5.3	32
BNT004KTL	7	32
BNT005KTL	8.5	32
BNT006KTL	10.5	32
BNT008KTL	13.5	32
BNT010KTL	17	32
BNT012KTL	21.5	63
BNT013KTL	22	63
BNT015KTL	27	63
BNT017KTL	30	63
BNT020KTL	32	63
BNT025KTL	40	63

### Surge Protector Recommendation

- AC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 2.5KV.
- DC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 3.2KV.

#### Note:



The Inverter can be only connected to low-voltage grid. (380/400/415Vac, 50/60Hz).

## 2.Safety & Symbols

### 2.1 Safety Precautions

1. All work on the inverter must be carried out by qualified electricians.
2. The device may only be operated with PV panels.
3. The PV panels and inverter must be connected to the ground.
4. Do not touch the inverter cover until 5 minutes after disconnecting both DC and AC power supply.

5. Do not touch the inverter enclosure when operating, keep away from materials that may be affected by high temperatures.
6. Please ensure that the used device and any relevant accessories are disposed of in accordance with applicable regulations.
7. Afore inverter should be placed upwards and handled with care in delivery. Pay attention to waterproof. Do not expose the inverter directly to water, rain, snow or spray.
8. Alternative uses, modifications to the inverter not recommended. The warranty can become void if the inverter was tampered with or if the installation is not in accordance with the relevant installation instructions.

## 2.2 Explanations of Symbols

Afore inverter strictly comply with relevant safety standards. Please read and follow all the instructions and cautions during installation, operation and maintenance.



### Danger of electric shock

The inverter contains fatal DC and AC power. All work on the inverter must be carried out by qualified personnel only.



### Beware of hot surface

The inverter's housing may reach uncomfortably hot 60°C (140°F) under high power operation. Do not touch the inverter enclosure when operation.



### Residual power discharge

Do not open the inverter cover until 5 minutes after disconnection both DC and AC power supply.



### Important notes

Read all instructions carefully. Failure to follow these instructions, warnings and precautions may lead to device malfunction or damage.



Do not dispose of this device with the normal domestic waste.



### Without transformer

This inverter does not use transformer for the isolation function.



### CE mark

The inverter complies with the requirements of the applicable CE guidelines.



Refer to manual before service.

# 3. Installation

## 3.1 Pre-installation


### 3.1.1 Unpacking & Package List

#### Unpacking

On receiving the inverter, please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.

#### Package List

Open the package, please check the packing list shown as below.

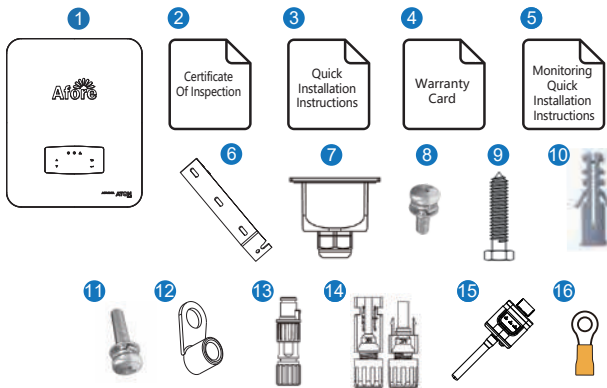


No.	Qty	Items	No.	Qty	Items
1	1	Solar Inverter	9	3	Mounting Bracket Screw
2	1	Certificate Of Inspection	10	3	Plastic Expansion Tube
3	1	Quick Installation Instructions	11	1	Security Screw
4	1	Warranty Card	12	4	AC Wiring Terminal
5	1	Monitoring Quick Installation Instructions	13	1	Zero-Injection Connector (Optional)
6	1	Wall Mounting Bracket	14	2/3/4	DC Connector sets
7	1	AC Waterproof Cover	15	1	Monitor Module
8	4	AC Wiring Cover Screw	16	1	Grounding Terminal

#### Note:




DC connectors Qty.: 3-13kW 2 pairs, 15kW 3 pairs, 17-25kW 4 pairs.



### 3.1.2 Product Overview

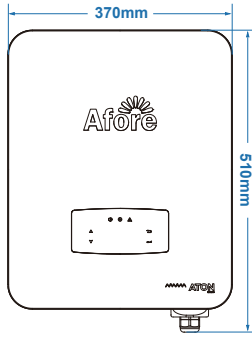


BNT003-006KTL

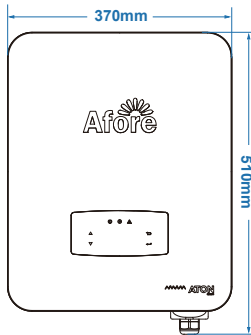

BNT008-015KTL

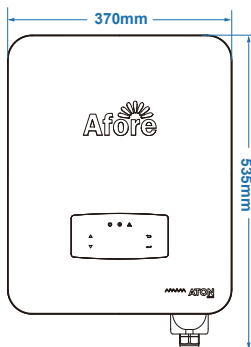


BNT017-025KTL






### Inverter Terminals


BNT003-006KTL

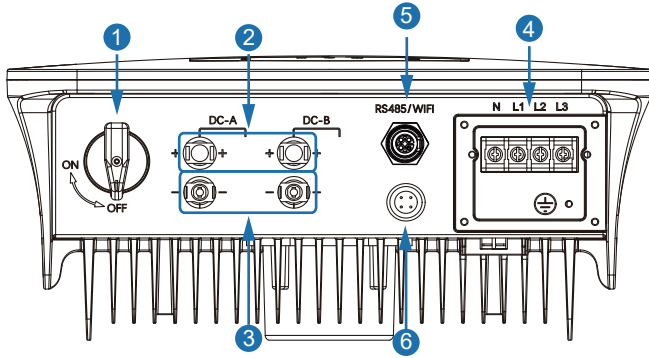


BNT008-013KTL

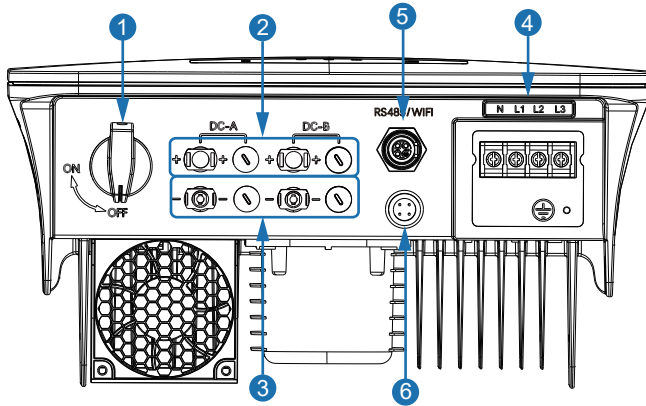

BNT015KTL

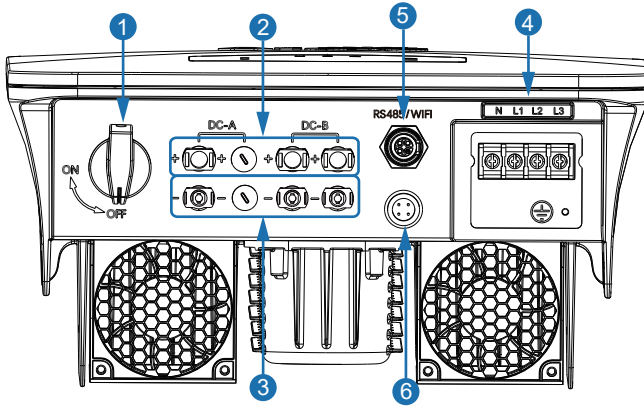

BNT017-025KTL

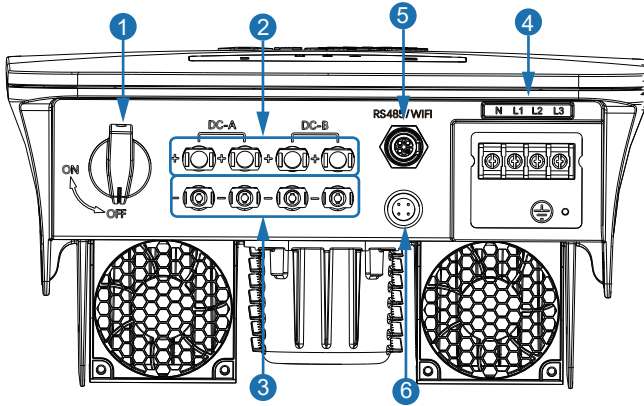


No.	Items
1	DC Switch
2	DC Connectors ( + ) For PV Strings
3	DC Connectors ( - ) For PV Strings
4	AC Connector
5	Zero-Injection Port (Optional)
6	Monitor Module Port


### 3.1.3 Mounting Location

The inverters are designed for indoor and outdoor installation (IP65), to increase the safety, performance and lifespan of the inverter, please select the mounting location carefully based on the following rules:


- The inverter should be installed on a solid surface, far from flammable or corrosion materials, where is suitable for inverter's weight and dimensions.
- The ambient temperature should be within  $-25\text{ C} \sim 60\text{ C}$  (between  $-13\text{ }^{\circ}\text{F}$  and  $140\text{ }^{\circ}\text{F}$ ).
- The installation of inverter should be protected under shelter. Do not expose the inverter to direct sunlight, water, rain, snow, spray lightning, etc.

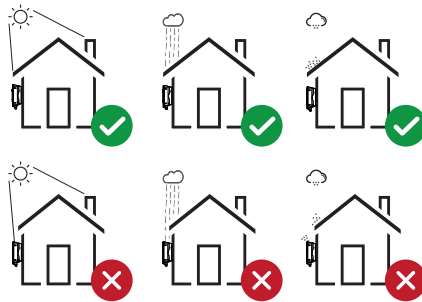

- The inverter should be installed vertically on the wall, or lean back on plane with a limited tilted angle. Please refer to below picture.


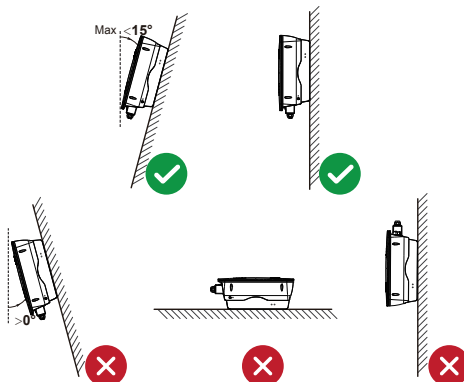


- Leave the enough space around inverter, easy for accessing to the inverter, connection points and maintenance.

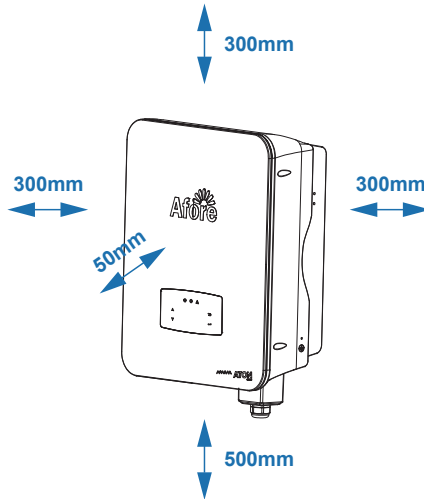


## 3.2 Mounting


### Step 1

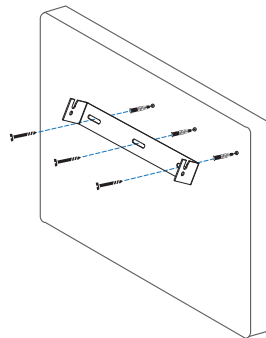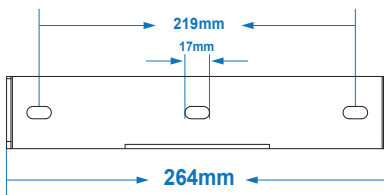

Step 2

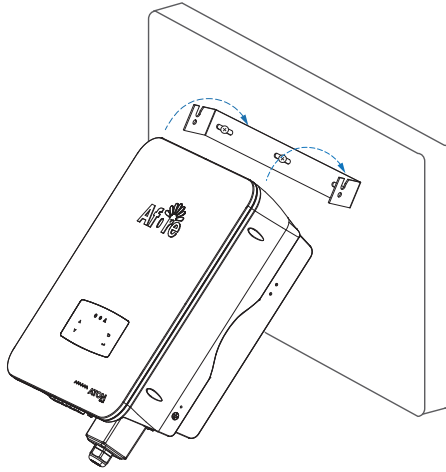

Step 3

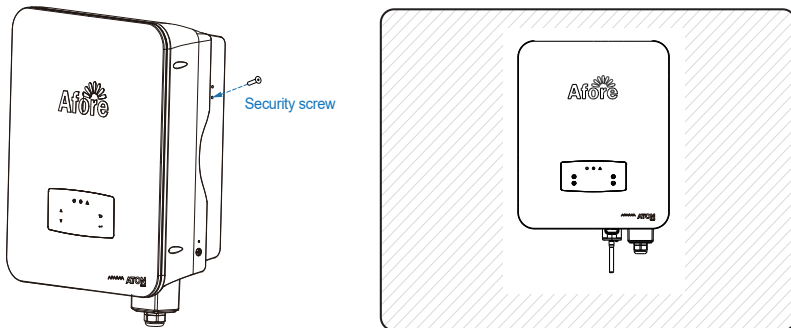

## 4. Electrical Connection

### 4.1 PV Connection

3-12kW three phase inverters have dual MPPT channels, each channel includes one PV string input;

13-15kW three phase inverters have dual MPPT channels, channel A includes 1 PV string input, and channel B includes 2 PV string inputs;

17-25kW three phase inverters have dual MPPT channels, each channel includes two PV string inputs;

For the best results, make sure that each MPPT channel is correctly connected with PV string. Otherwise, the inverter will activate voltage or current protection automatically.

Please make sure below requirements are followed:

- The open-circuit voltage and short-circuit current of PV string should not exceed the reasonable range of the inverters.
- The isolation resistance between PV string and ground must exceed 10 kΩ.
- The polarity of PV strings are correct.
- Use the DC plugs in the accessory.
- The lightning protector should be equipped between PV string and inverter.
- Disconnect all of the PV (DC) switch during wiring.




**Warning:**

The fatal high voltage may on the DC side, please comply with electric safety when connecting.

Please make sure the correct polarity of the cable connected with inverter, otherwise inverter could be damaged.


**Step 1**

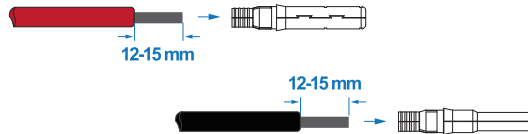

**Note:**

PV cable suggestion  
Cross-section  
4mm<sup>2</sup>


Step 2

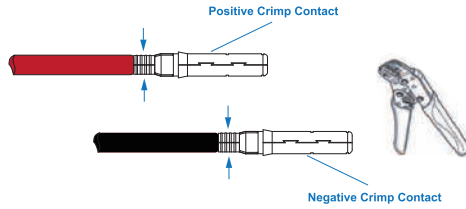

Note:


Please use PV connector crimper to pinch the point of the arrow.


Step 3

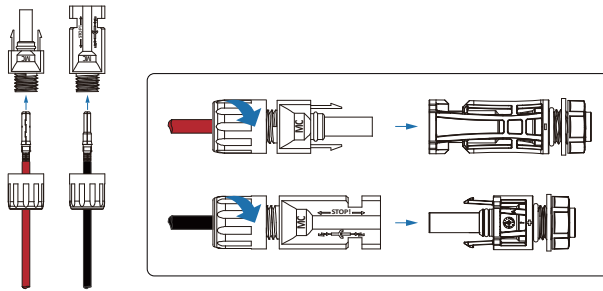

Note:


You'll hear click sound when the connector assembly is correct.

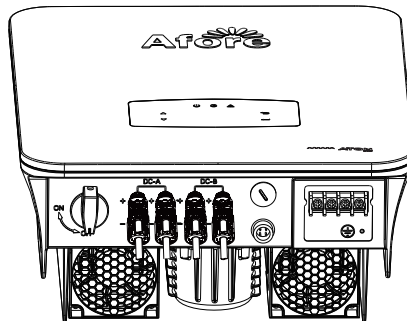

**Note:**  
 PV string suggestion:


**Option 1**

Please ensure that each two strings of solar panels connected to inverter's each MPPT channel, the model and quantity of the solar panels of each string should be the same.

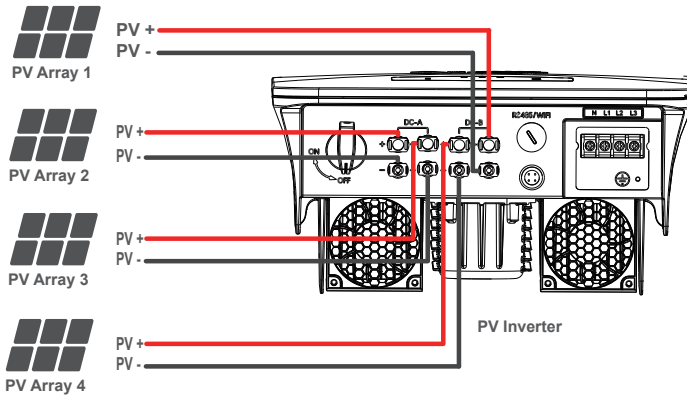

**Option 2**

In the high-power PV panel system, can connect each MPPT channel with one PV string, please make sure each PV string's voltage and current are within the recommended range of the inverter.

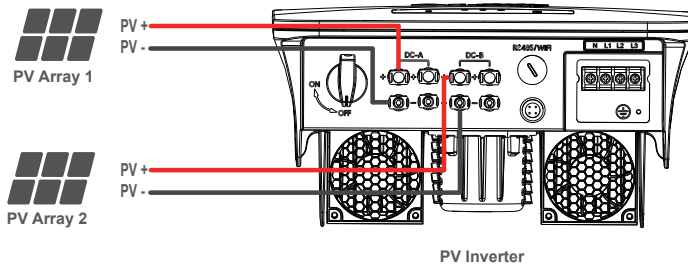



## 4.2 Grid Connection

The external AC switch should be installed between inverter and grid to isolate from grid. Please make sure below requirements are followed before connecting AC cable to the inverter.

- The AC (grid) voltage should not exceed the reasonable range of the inverters.
- The phase-line from AC distribution box are correctly connected.
- Use the AC plugs in the accessory.
- The surge protector should be equipped between grid and inverter.
- Disconnect the AC (grid) switch during wiring.



**Warning:**

The fatal high voltage may on the AC side, please comply with electric safety when connecting.  
Please make sure the right line of AC grid connected with inverter, otherwise inverter could be damaged.

**Step 1**


Cable suggestion:

3-13kW Cross-section (Copper) 4-6mm<sup>2</sup> / 10AWG

15kW Cross-section (Copper) 6-10mm<sup>2</sup> / 8AWG

17-20kW Cross-section (Copper) 10-16mm<sup>2</sup> / 6AWG


After the terminals are crimped, wrap the joint position with insulation tape.

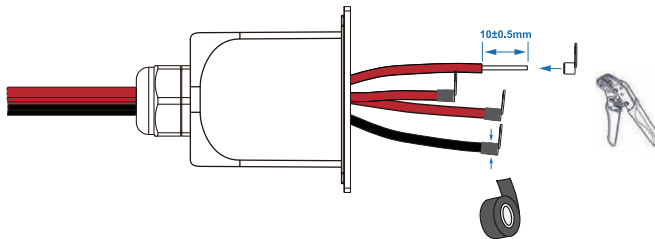

**Note:**

The wiring terminals should be wrapped with insulation tape, otherwise it will cause a short circuit and damage the inverter.

Step 2

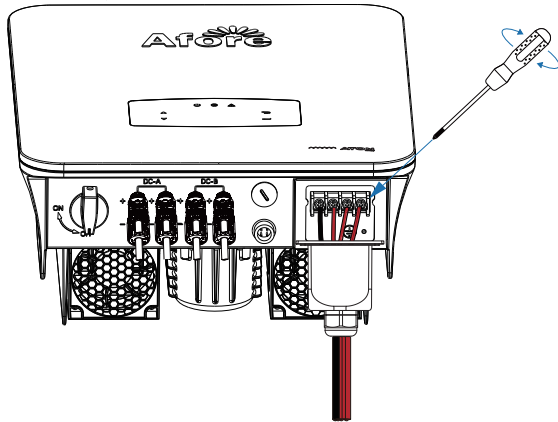


N = Neutral line

L1, L2, L3 = Live line

Unscrew the row of screws, insert the wire harness into the N, L1, L2, L3 caps one by one, and tighten the screws.

Step 3

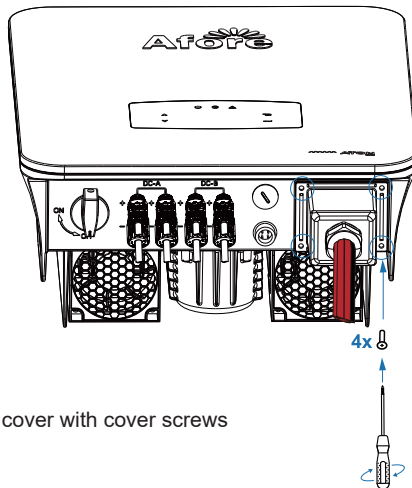

Fix the AC wiring cover with cover screws


### 4.3 Earth Connection



**Note:**

The user must connect a protective earth (PE) terminal to prevent electric shock. And make sure this PE terminal is properly grounded.


**Step 1**

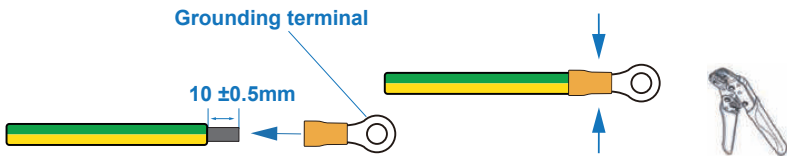

**Note:**

Earth cable PE suggestion:  
Cross-section (Copper) 4-6mm<sup>2</sup> / 10AWG

**Step 2**

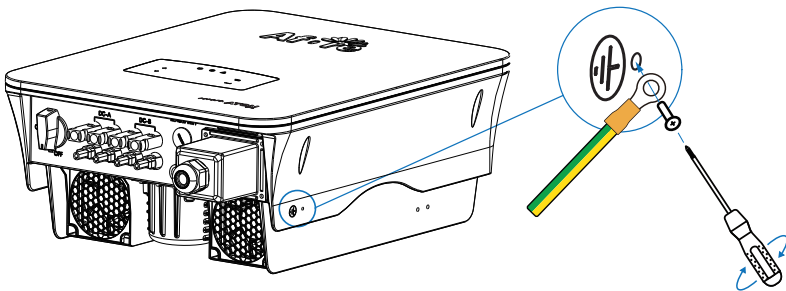

Grounding terminal is connected to the inverter at left or right side.


## 4.4 Communication Connection

The monitoring module could transmit the data to the cloud server, and display the data on the PC, tablet and smart-phone.


### Install the WIFI / Ethernet / GPRS / RS485 Communication

WIFI / Ethernet / GPRS / RS485 communication is applicable to the inverter. Please refer to "Communication Configuration Instruction" for detailed instruction.

#### Step 1

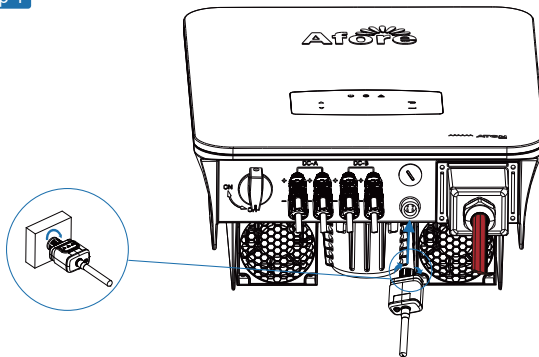

#### Step 2

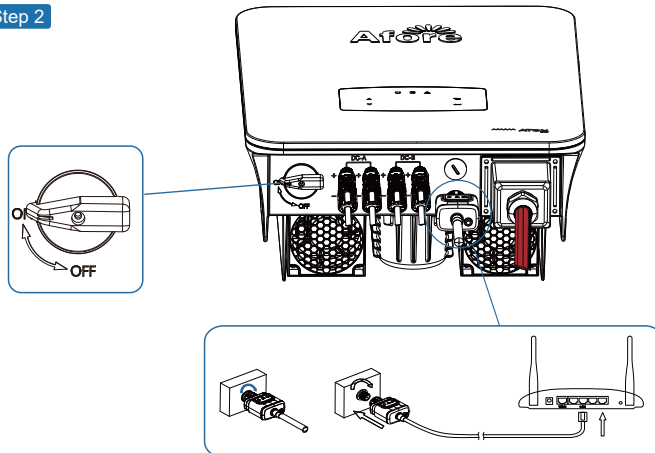


Turn on the DC switch and AC circuit breaker, and wait until the LED indicator on the monitoring module flashes, indicating that the monitoring module is successfully connected.

## 4.5 Zero-injection Smart Meter (Optional)


Smart meter is an intelligent control equipment which is used for on-grid inverters. Its main function is to measure the forward and reverse power on the grid-connected side, and transmit data to the inverter through RS485 communication to ensure that the power of the inverter is less than or equal to the user's home load, and no current flows into the grid.

**Step 1**

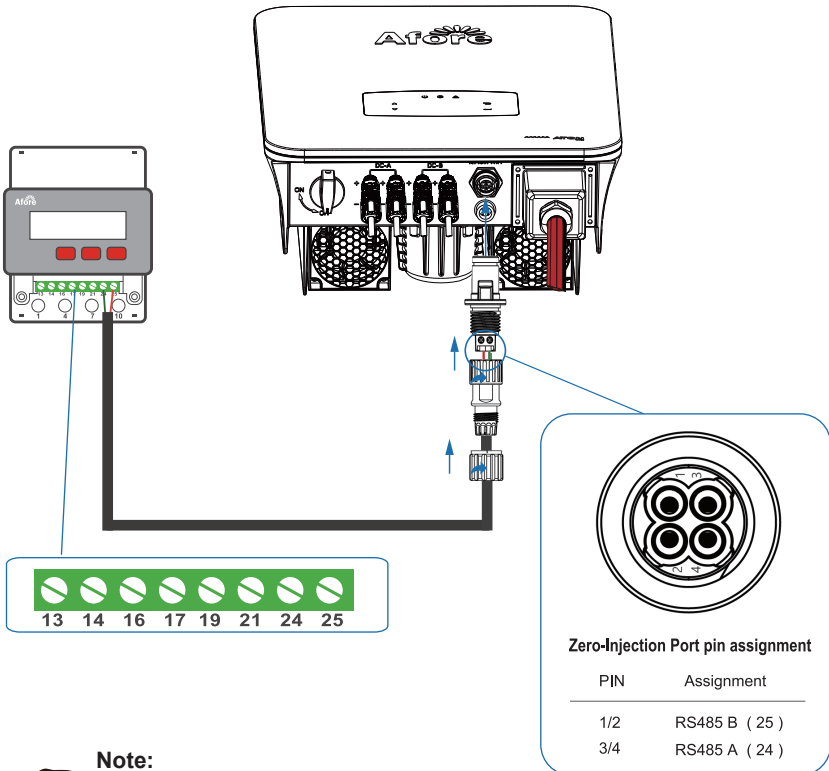

**Note:**  
 please follow below pin order  
 RS485B (Pin 1/2) to three-phase meter (Pin 25)  
 RS485A (Pin 3/4) to three-phase meter (Pin 24)


Step 2

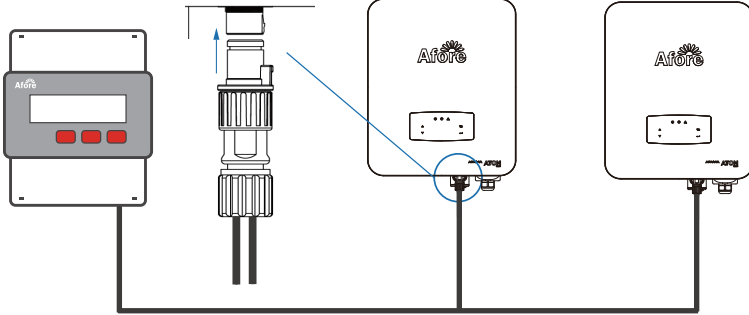

**Note:**



When multiple inverters are connected in parallel, the total output power could not exceed the reasonable range of the smart meter.

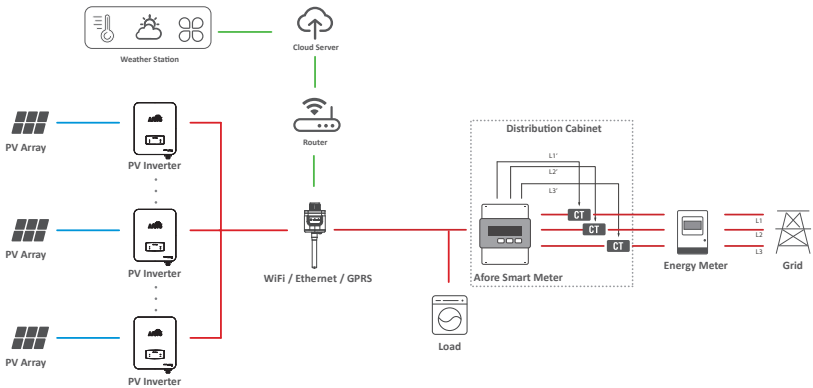


**Note:**



The Inverter could be connected in parallel with Smart Meter, make sure the total load power not exceed Smart Meter's limitation.

## 5.Operation


### 5.1 Control Panel

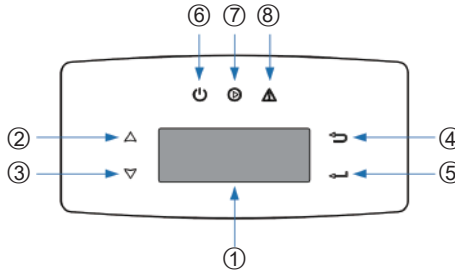



No.	Items	No.	Items
1	LCD Display	5	<b>ENT</b> Touch Button
2	<b>UP</b> Touch Button	6	<b>POWER</b> LED Indicator
3	<b>DOWN</b> Touch Button	7	<b>GRID</b> LED Indicator
4	<b>ESC</b> Touch Button	8	<b>FAULT</b> LED Indicator

Sign	Power	Color	Explanation
<b>POWER</b>	ON	Green	The inverter is stand-by
	OFF		The inverter is power off
<b>GRID</b>	ON	Green	The inverter is feeding power
	OFF		The inverter is not feeding power
<b>FAULT</b>	ON	Red	Fault occurred
	OFF		No fault

## 5.2 Menu Structure

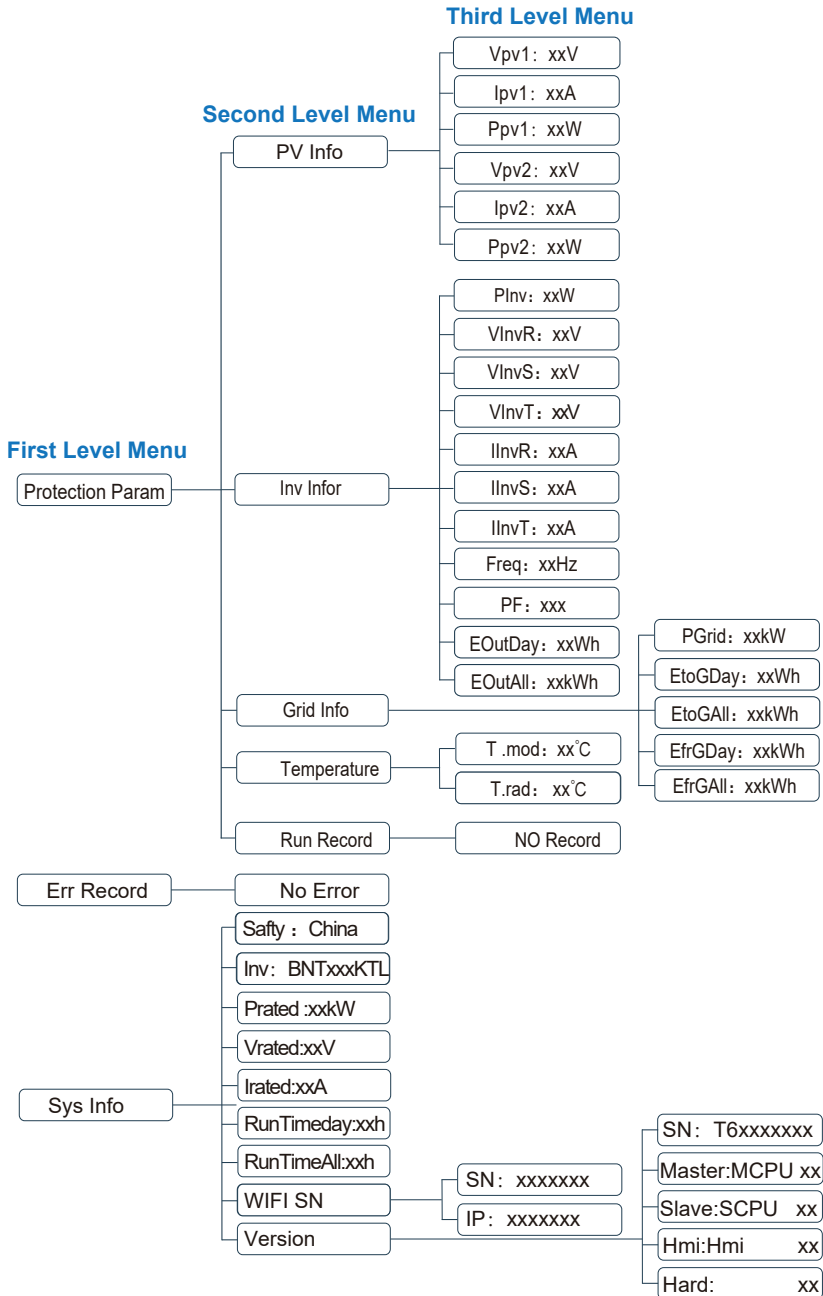



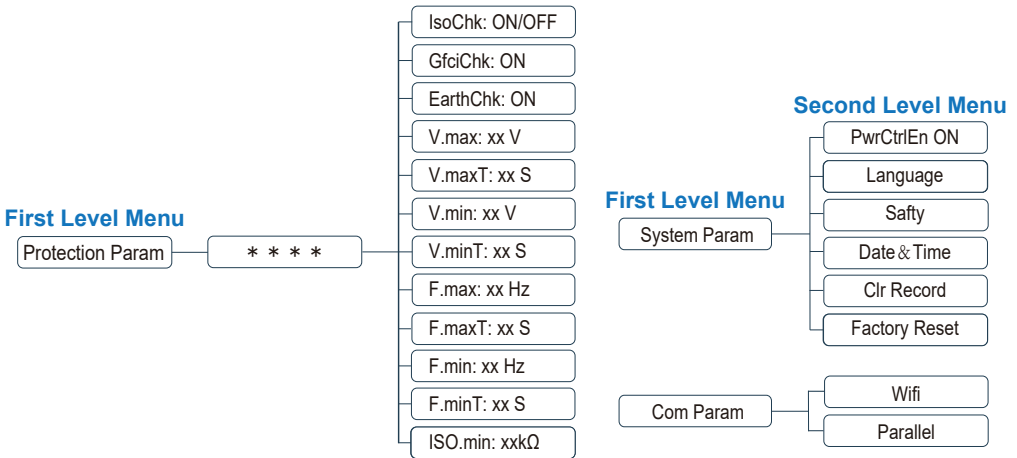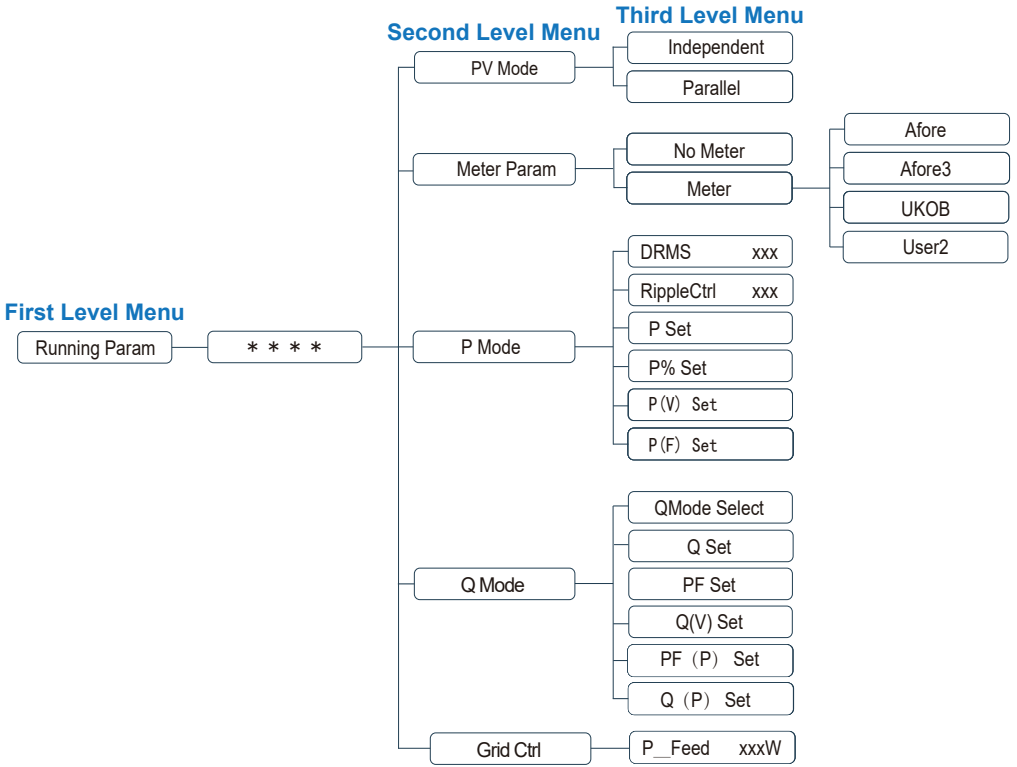


## Explanation of LCD Display Content


Nouns	Explanation
Sys Info	Check the inverter's real-time operating information
Error Record	Check the inverter's fault records with date and time
System Param	Set the inverter's safty code / lanuage / time & date, restore to factory settings
Version	Check the inverter's SN and firmware version
Protection Param	Set the inverter's protection parameters
Running Param	Set the inverter's operating mode like parellel, active / reactive power control


## 5.3 Setting

### 5.3.1 Startup

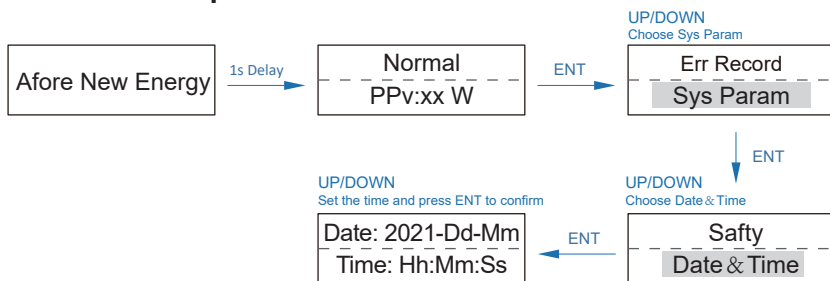


### 5.3.2 Voltage Range



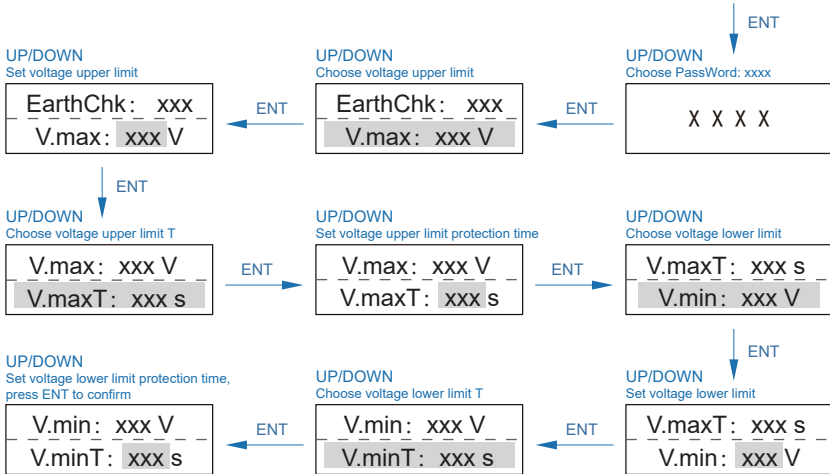

### 5.3.3 Frequency Range

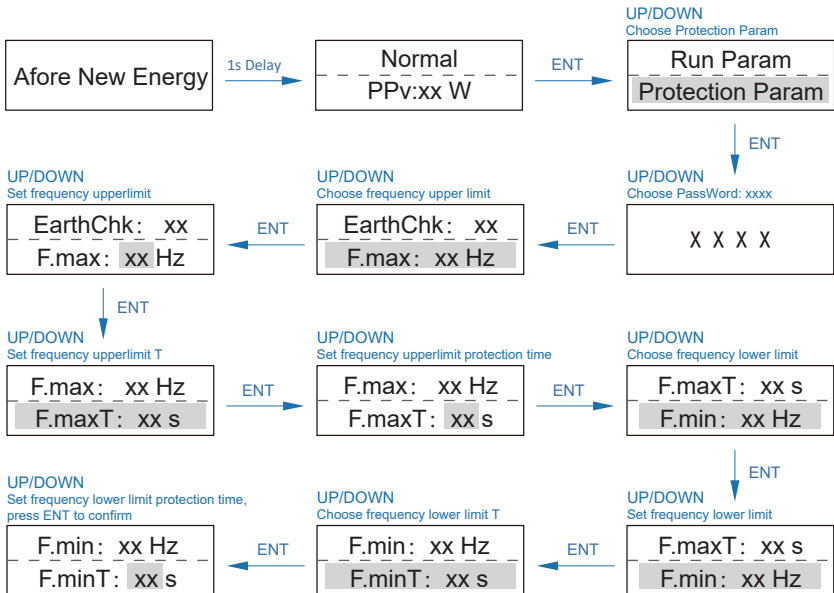

**Note:**

The parameters setting only works after the inverter is restarted.

## 6. Commissioning

Before starting up commissioning at site, please make sure below procedures and requirements are fully meet.

- Mounting location is meet the requirements.
- All of the electrical wiring is firmly connected, including PV wiring, Grid wiring and Earth wiring.
- The inverter setting has been finished accordingly to local standards or regulations.

### Commissioning Procedures

- Turn on the AC switch between inverter output and the public grid;
- Turn on the DC switch on the inverter;
- Turn on the PV switch of the system.

## 7. Start-up & Shut Down

### 7.1 Shut down

- Turn off the DC switch on the inverter.
- Turn off the DC switch between PV panels and the inverter (if any).
- Close the AC switch between the inverter and the public grid.

**Note:**

The inverter will be operable after minimum 5 minutes.

### 7.2 Restart

- Shut down the inverter according to Chapter 7.1.
- Start-up the inverter according to Chapter 6.

## 8.Maintenance&Trouble Shooting

### 8.1 Maintenance

Periodically maintenance are necessary, please follow steps as below.

PV connection: twice a year

AC connection : twice a year

Earth connection: twice a year

Heat sink: clean with dry towel once a year.

### 8.2 Trouble Shooting

Fault messages will be displayed when fault occurs, please according to trouble- shooting table find related solutions.

### Trouble-Shooting List

Type of Fault	Code	Name	Description	Recommend Solution
PV Fault	A01	PvConnectFault	The actual PV connection type (independent, parallel) different from setup.	<ul style="list-style-type: none"> <li>• Set PV connection type according to the actual PV connection type.</li> </ul>
	A02	IsoFault	ISO check among PV panels/ the wires to the ground is abnormal.	<ul style="list-style-type: none"> <li>• Check whether the PV modules and its wiring are immersed in water and whether the insulation is damaged, and then make corrections.</li> <li>• If the fault occurs continuously and frequently, contact the local distributors for help.</li> </ul>
	A03	PvAfcifault	PV current arcing	<ul style="list-style-type: none"> <li>• Check whether the PV cables and wiring terminals are broken or connection abnormal, and correct them.</li> <li>• If the fault occurs continuously and frequently, contact the local distributors for help.</li> </ul>
	A04	Pvs1OverVoltFault	PV Voltage over, beyond the reasonable range.	<ul style="list-style-type: none"> <li>• Reconfiguration of PV strings, reduce the PV number of a PV string to reducing inverter PV input voltage.</li> <li>• Contact local distributors for suggestion.</li> </ul>
	A05	PVs2OverVoltFault		
	A16	PVs1ReverseFault	PV(+) and PV(-) reversed Connection	<ul style="list-style-type: none"> <li>• Check whether PV(+) and PV(-) connection reversed or not. If reversed, make correction.</li> </ul>
	A17	PVs1ReverseFault		
	A33	Pv1AbnormalFault	Compared with previous voltage and other PV voltages, this PV voltage suddenly becomes higher or lower.	<ul style="list-style-type: none"> <li>• Check if PV modules are partially blocked or cells are damaged.</li> <li>• Check if PV cables and terminals broken or loose connection, then repair it.</li> </ul>
	A34	Pv2AbnormalFault		
DC Fault	E01	Pv1HwOverCurrFault	PV current over, triggered the hardware protection circuit	<ul style="list-style-type: none"> <li>• Power off, then restart</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E02	Pvs2HwOverCurrFault		
	E13	PVs1SwOverCurrFault	PV current over, triggered the software protection circuit	<ul style="list-style-type: none"> <li>• Power off, then restart</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E14	PVs2SwOverCurrFault		

Type of Fault	Code	Name	Description	Recommend Solution	
DC Fault	E33	Boost1SelfCheckFault	PV boost circuit abnormal when self checking	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>	
	E34	Boost2SelfCheckFault			
	E45	BusHwOverVoltFault	Bus voltage over	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>	
	E46	BusHwOverHalfVoltFault			
	E47	BusSwOverVoltFault			
	E48	BusSwOverHalfVoltFault			
	E49	BusSwUnderVoltFault	Bus voltage under as running		
	E50	BusUnbalancedFault	DC Bus voltage unbalanced		
AC Fault	F01	HwOverFault	Hardware detected that current over / BUS voltage over		<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	F02	InvHwOverCurrFault	Hardware detected that inverter current over		
	F03	InvROverCurrFault	R phase /Split phase L1 current over		
	F04	InvSOverCurrFault	S phase /Split phase L2 current over		
	F05	InvTOverCurrFault	T phase current over		
	F06	GridUnbalanCurrFault	3 phase current effective value has big difference		
	F07	DclnjOverCurrFault	DC injection current over		
	F08	AcOverLeakCurrFault	Ac side leakage current over	<ul style="list-style-type: none"> <li>• Check if PV panels has good ground insulation and ground wires are connected well ground is well, then repair it.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>	
	F09	PLLFault	The phase-locked loop is operating abnormally, and it does not stably track the grid voltage phase.	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>	
	F10	GridRelay1Fault	It is detected that the relay group 1 cannot be opened or closed normally.		

Type of Fault	Code	Name	Description	Recommend Solution
System Fault	G01	PVs1ReverseFault	PV current sampling hardware abnormal	<ul style="list-style-type: none"> <li>Power off, then restart.</li> <li>If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	G02	PVs2CurAdChanFault		
	G16	RInvCurAdChanFault		
	G17	SInvCurAdChanFault		
	G18	TInvCurAdChanFault		
	G19	RInvDciAdChanFault		
	G20	SInvDciAdChanFault		
	G21	TInvDciAdChanFault		
	G22	LeakCurAdChanFault		
	G23	VoltRef(1.65V)AdChanFault		
	G30	UpsRDcvAdChanFault		
	G31	UpsSDcvAdChanFault		
	G32	UpsTDcvAdChanFault		
	G37	TempAdChanFault	All temperature sensors abnormal	<ul style="list-style-type: none"> <li>Power off, then restart.</li> <li>If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	G38	VoltAdConflictFault	The sample value of PV, battery and BUS voltage inconsistent with the actual value	
	G39	CPUAdConflictFault	The sample value between master CPU and slaver CPU inconsistent	
	G40	PowerCalcConflictFault	The sum of the PV power, battery and inverter output is too different from zero.	
	G41	EnvirOverTemp1Fault	Installation environment temperature over or low	<ul style="list-style-type: none"> <li>Improve or change the installation environment to adjust the inverter installation environment temperature to normal range.</li> <li>Power off, then restart.</li> <li>If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	G42	EnvirLowTemp1Fault		
	G43	CoolingOverTemp2Fault	Cooling temperature over or low	
G44	CoolingLowTemp2Fault			
G45	OverTemp3Fault	Temperature3 over or low		
G46	LowTemp3Fault			
G46	DSPOverTempFault	CPU temperature over		



Type of Fault	Code	Name	Description	Recommend Solution
System Fault	G48	ModelConflictFault	Version conflict with inverter	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please contact local distributors for software upgrade, version setting details.</li> </ul>
Inner Warning	101	InterFan1Warning	Fan abnormal	<ul style="list-style-type: none"> <li>• Check if there is objects which blocking the fan rotation and remove it.</li> <li>• If those faults occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	102	ExterFanWarning		
	103	Fan3Warning		
	104	EnvirTemp1AdChanWarning	Some temperature sensors abnormal	<ul style="list-style-type: none"> <li>• The warning does not affect the normal operation of the inverter.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	105	CoolingTemp2AdChanWarning		
	106	Temp3AdChanWarning		
	107	ExtFlashComWarning	Communication between the master CPU and the Flash is abnormal.	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	108	EepromComWarning	Communication between the master CPU and the Eeprom is abnormal.	
	109	SlaveComWarning	Communication between slaver CPU and master CPU is abnormal	
	110	HmiComWarning	Communication between master CPU and HMI is abnormal	
	111	FreqCalcConflictWarning	Frequency value abnormal	
	112	UnsetModel	Running model is not initial	• Contact with local distributor.
Outside Warning	J01	MeterComWarning	Communication between inverter and meter is abnormal.	<ul style="list-style-type: none"> <li>• Check the meter model, and whether meter wiring and terminals are connected correctly, damaged or loose, if happens, make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	J02	MeterConnectWarning	Meter/CT wiring fault, or installation position fault.	<ul style="list-style-type: none"> <li>• Check whether the meter or CT wiring, installation position, and installation direction are wrong, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>

Type of Fault	Code	Name	Description	Recommend Solution
Outside Warning	J04	GndAbnormalWarning	Poor grounding or no grounding wire has been detected.	<ul style="list-style-type: none"> <li>• Check whether the ground wire of the inverter is properly connected and whether the ground impedance is over, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	J05	ParallelComWarning	Communication between master inverter and slaver ones abnormal in parallel mode.	<ul style="list-style-type: none"> <li>• Check whether the parallel communication line is damaged, the terminal is loose, the wiring hole position is correct, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>

# 9. Specifications

<b>PV Input Data</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
Max. DC Power ( W )	5100	6000	7500	9000	12000	15000
Max. DC Voltage ( V )	1100					
MPPT Voltage Range ( V )	150 - 1000					
MPPT Full Power Voltage Range ( V )	200 - 850		250 - 850		300 - 850	500 - 850
Rated Input Voltage ( V )	620					
Start-up Voltage ( V )	150					
Max. Input Current ( A )	15 x 2					
Max. Short Current ( A )	25 x 2					
No. of MPP Tracker / No. of PV String	2/2					
Input Connector Type	MC4					
<b>AC Output Data</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
Max. Output Power ( W )	3300	4400	5500	6600	8800	11000
Nominal Output Power ( W )	3000	4000	5000	6000	8000	10000
Max. Output Current ( A )	5.3	7	8.5	10.5	13.5	17
Nominal Output Voltage ( V )	3P+N+PE /3P+PE 230/400					
Grid Voltage Range	260Vac-519Vac (according to local standard)					
Nominal Output Frequency ( Hz )	50/60					
Grid Frequency Range	45-55Hz/55-65Hz (according to local standard)					
Output Power Factor	1 default (adjustable from 0.8 leading to 0.8 lagging)					
Output Current THD	<3%					
<b>Efficiency</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
Max. Efficiency	98.30%			98.05%		98.70%
Euro Efficiency	97.61%	97.65%	98.00%	98.05%		98.23%
<b>Protection</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
PV Reverse Polarity Protection	YES					
PV Insulation Resistance Detection	YES					
AC Short Circuit Protection	YES					
AC Over Current Protection	YES					
AC Over Voltage Protection	YES					
Anti-Islanding Protection	YES					
Residual Current Detection	YES					
Over Temperature Protection	YES					
Integrated DC switch	YES					
Surge Protection	Integrated (Type II)					
Smart IV Curve Scanning	YES					
Quick Arc Fault Circuit Interruption	Optional					
<b>General Data</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
Dimensions (H x W x D, mm)	510 x 370 x 167				510 x 370 x 192	
Weight ( kg )	16				15	
Protection Degree	IP65					
Enclosure Material	Aluminum					
Ambient Temperature Range (°C)	-25 to 60					
Humidity Range	0 - 100%					
Topology	Transformerless					
Communication Interface	RS485 / WiFi / Wire Ethernet / GPRS (optional)					
Cooling Concept	Convection					
Noise Emission ( db )	<30					
Night Power Consumption ( W )	<1					
Max. Operation Altitude ( m )	≤4000					
<b>Certifications and Standards</b>	<b>BNT003KTL</b>	<b>BNT004KTL</b>	<b>BNT005KTL</b>	<b>BNT006KTL</b>	<b>BNT008KTL</b>	<b>BNT010KTL</b>
EMC Standard	EN/IEC 61000-6-2, EN/IEC 61000-6-3, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN61000-3-12					
Safety Standard	IEC 60068, UL1741, EN62109					
Grid-connection	IEEE1547, CSA C22, EN50549, VDE4105, VDE0126, RD1699, ABNT NBR16149 & 16150, AS4777.2, NB/T32004, G98/G99, IEC61727					

PV Input Data	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
Max. DC Power ( W )	18000	19500	22500	25500	30000	37500
Max. DC Voltage ( V )	1100					
MPPT Voltage Range ( V )	150 -1000					
MPPT Full Power Voltage Range ( V )	500 -850					
Rated Input Voltage ( V )	620					
Start-up Voltage ( V )	150					
Max. Input Current ( A )	15 x 2		20 + 32		32 x 2	
Max. Short Current ( A )	25 x 2		30 + 48		48 x 2	
No. of MPP Tracker / No. of PV String	2/2		2/3		2/4	
Input Connector Type	MC4					
AC Output Data	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
Max. Output Power ( W )	13200	14300	16500	18700	22000	27500
Nominal Output Power ( W )	12000	13000	15000	17000	20000	25000
Max. Output Current ( A )	21.5	22	27	30	32	40
Nominal Output Voltage ( V )	3P+N+PE /3P+PE 230/400					
Grid Voltage Range	260Vac-519Vac (according to local standard)					
Nominal Output Frequency ( Hz )	50/60					
Grid Frequency Range	45-55Hz/55-65Hz(according to local standard)					
Output Power Factor	1 default (adjustable from 0.8 leading to 0.8 lagging)					
Output Current THD	<3%					
Efficiency	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
Max. Efficiency	98.70%			98.75%		
Euro Efficiency	98.23%			98.35%		
Protection	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
PV Reverse Polarity Protection				YES		
PV Insulation Resistance Detection				YES		
AC Short Circuit Protection				YES		
AC Over Current Protection				YES		
AC Over Voltage Protection				YES		
Anti-Islanding Protection				YES		
Residual Current Detection				YES		
Over Temperature Protection				YES		
Integrated DC switch				YES		
Surge Protection	Integrated (Type II)					
Smart IV Curve Scanning				YES		
Quick Arc Fault Circuit Interruption	Optional					
General Data	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
Dimensions ( H x W x D, mm )	510 x 370 x 192		535 x 370 x 192			
Weight ( kg )	15	17	19			
Protection Degree	IP65					
Enclosure Material	Aluminum					
Ambient Temperature Range (°C)	-25 to 60					
Humidity Range	0 -100%					
Topology	Transformerless					
Communication Interface	RS485 / WiFi / Wire Ethernet / GPRS (optional)					
Cooling Concept	Intelligent fan cooling					
Noise Emission ( db )	<40					<51
Night Power Consumption ( W )	<1					
Max. Operation Altitude ( m )	≤4000					
Certifications and Standards	BNT012KTL	BNT013KTL	BNT015KTL	BNT017KTL	BNT020KTL	BNT025KTL
EMC Standard	EN/IEC 61000-6-2, EN/IEC 61000-6-3, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN61000-3-12					
Safety Standard	IEC 60068, UL1741, EN62109					
Grid-connection	IEEE1547, CSA C22, EN50549, VDE4105, VDE0126, RD1699, ABNT NBR16149 & 16150, AS4777.2, NB/T32004, G98/G99, IEC61727					